

# Navigation system quick reference

## Getting around the system



### Joystick and ENTER button

**Joystick** – The joystick has eight movements (up/down, left/right, and diagonal), and has the following functions:

- Highlights menu items, setup options and text items (up/down).
- Character and number input (up/down, left/right, and diagonal).
- Scrolling map position (up/down, left/right, and diagonal).

**ENTER button** – Push the top of the joystick. This has the following functions:

- Selects the highlighted menu item, setup option or text item.
- After scrolling the map, shows the map cursor location details highlighted in a text box. (Push ENTER again to select.)



### MENU button

Displays the main menu. Highlight the option required using the joystick (up/down) and push ENTER.



### CLEAR button

The CLEAR button has the following functions according to the screen currently displayed:

- Returns to the previous menu, character input or text screen.
- Push and hold for two seconds to change the map orientation.



### REPEAT button

While under guidance, repeats the last audible instruction. If the manoeuvre point has been passed, the audible instruction for the next manoeuvre point will be heard.



### ON/OFF button

Push ON/OFF at any time to turn the screen off. The system continues to operate and to monitor vehicle position.

Push ON/OFF again to turn the screen back on. (The road safety caution screen is only displayed when the ignition is switched on.)



### MAP button

The MAP button has the following functions:

- Returns to the map display, showing the current vehicle position, from any other screen, or after scrolling the map.
- While under guidance, toggles between map and arrow view.



### SCALE control

The SCALE control (up/down) has the following functions:

- Changes the scale (reduce/enlarge) when a map screen is displayed.
- Displays more pages of text, when the scrolling arrows are displayed at the top or bottom of a screen.



### LIST button

Lists the turn information for the calculated route.

## **Options available before driving**

### **Changing the display colour**

MENU → Setup → Display Colour → Select Day, Night or Auto.

### **Selecting a language**

MENU → Setup → Language → Select a language.

### **Selecting the guide method**

MENU → Setup → Guide Method → Select Hybrid, Arrow or Map.

### **Editing memory points**

MENU → Option → Edit Memory Points → Select a point to edit or delete.

### **Editing recent destination points**

MENU → Option → Edit Recent Dest. Points → Select a point to delete, or delete all points.

## **Options available while driving under guidance**

### **Cancelling guidance**

MENU → Route → Cancel Current Destination → Confirm the on-screen prompt.

### **Avoiding roads**

MENU → Route → Avoid Roads → Select a road → Reroute → ENTER to Proceed.

### **Changing the calculating method**

MENU → Route → Change Calculating Method → Select a method.

### **Changing map heading**

CLEAR → Push and hold for two seconds to change the map orientation (north or vehicle heading to top of screen).


### **Repeating voice guidance**

REPEAT → Repeats the last audible instruction.  
(If the manoeuvre point has been passed, the audible instruction for the next manoeuvre point will be heard.)

### **Listing turns information**

LIST → Displays the turn information for the calculated route.

# Menu structure

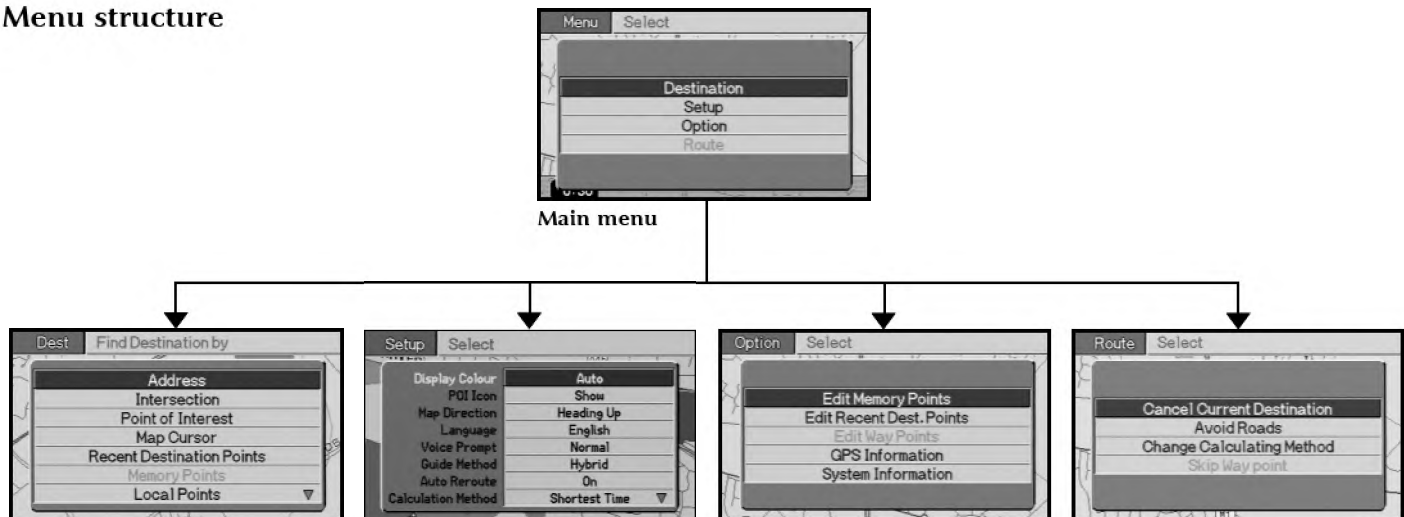

JOL812

## Destination menu

- Address
- Intersection
- Point of Interest
- Map Cursor
- Recent Destination Points
- Memory Points
- Local Points
- Way Points

## Setup menu

- Display Colour
- POI Icon
- Map Direction
- Language
- Voice Prompt
- Guide Method
- Auto Reroute
- Calculation Method
- Time Zone
- Summer Time

## Option menu

- Edit Memory Points
- Edit Recent Dest. Points
- Edit Way Points
- GPS Information
- System Information

## Route menu

- Cancel Current Destination
- Avoid Roads
- Change Calculating Method
- Skip Way point

### Note:

1. To select the main menu, push MENU.
2. If the desired menu item is no displayed, scroll the screen using the joystick (up/down).

## Getting started

To make a selection, highlight the item required using the joystick and push ENTER.

### Initialisation

Analogue Clock → Caution screen → Map display.

### Entering a destination by address

MENU → Destination → Address → Street/City Name Input → Enter the address details → Confirm Destination → ENTER to Proceed.

### Entering a destination to a city centre

MENU → Destination → Map Cursor → City Name Input → Enter the city name.  
(The system defaults to the centre of the city entered.)

### Storing a frequently used location as a destination

Enter the address details → Confirm Destination → Set Memory Point.


### Selecting a frequently used location as a destination

MENU → Destination → Memory Points → Select a Memory Point → Confirm Destination → Set Memory Point.

### Selecting a point of interest

MENU → Destination → Point of Interest → Place Name Input/Category List → Select a point → Confirm Destination → ENTER to Proceed.

## Typical guidance screen

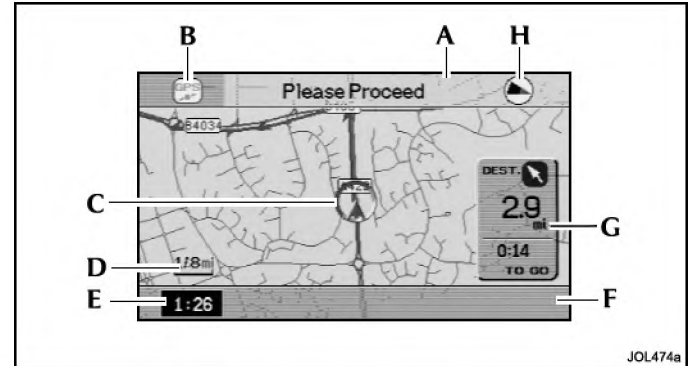

- A. Upper message area
- B. GPS symbol
- C. Navigation symbol
- D. Map scale
- E. Clock
- F. Lower message area
- G. Destination information
- H. Map orientation symbol